

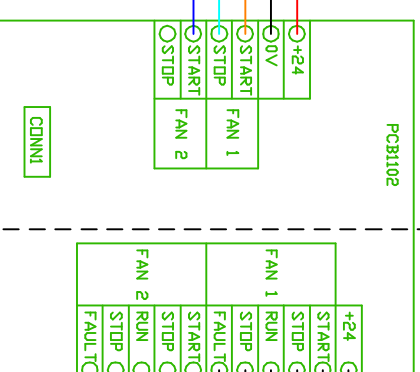
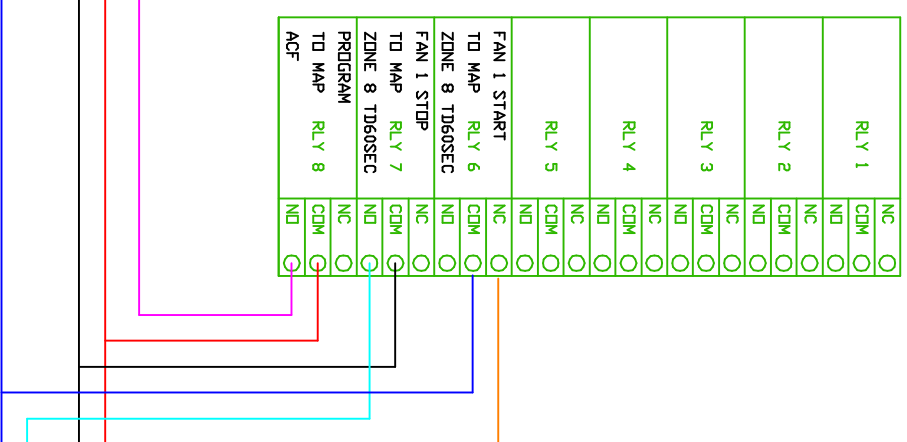


PANEL LABELS

DUCT PROBE ZONE 8	DUCT PROBE ZONE 8	ACF
-------------------------	-------------------------	-----

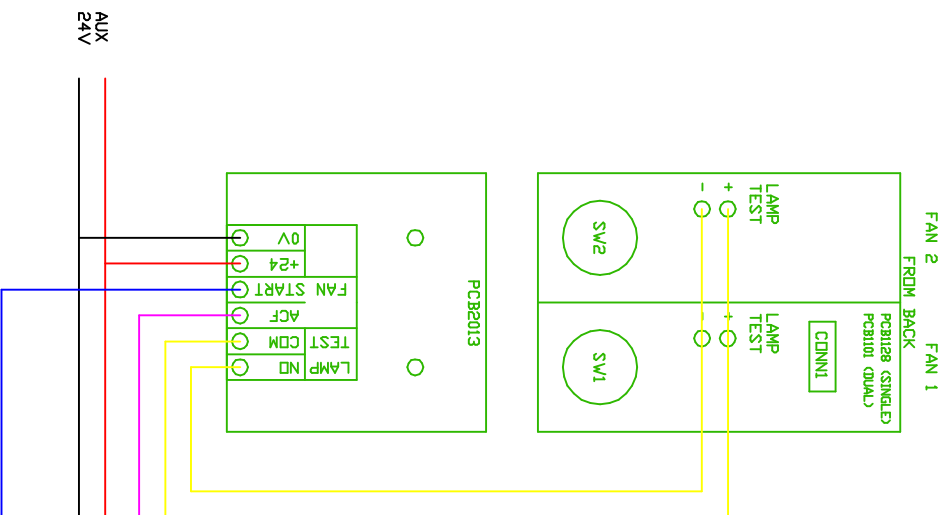

CUSTOMER CONNECTION

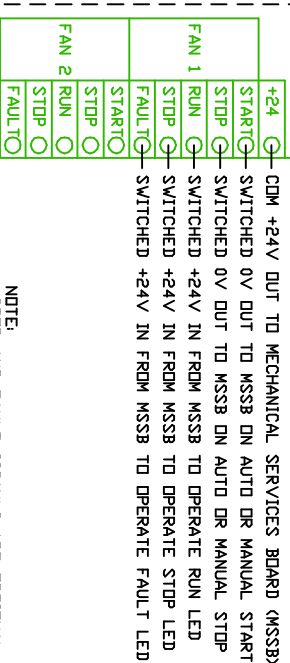

NOTE:
-STOP AND FAULT SIGNALS ARE OPTIONAL.
-PANEL WILL AUTOMATICALLY WORK OUT STOP
AND FAULT BASED ON RUN INDICATION ALONE
WHEN NOT IN 6 WIRE MODE.
-J1 AND/OR J2 MUST BE FITTED FOR
3.45 WIRE SYSTEMS, REMOVE FOR 6 WIRE.

[illegible]