

VESDA VLC

Installation Guide

VESDA VLC-500
VESDA VLC-505

September 2014

Document: 13718_A0

Revision: A

Build: 0

Part Number: 18935

Intellectual Property and Copyright

This document includes registered and unregistered trademarks. All trademarks displayed are the trademarks of their respective owners. Your use of this document does not constitute or create a licence or any other right to use the name and/or trademark and/or label.

This document is subject to copyright owned by Xtralis AG ("Xtralis"). You agree not to copy, communicate to the public, adapt, distribute, transfer, sell, modify or publish any contents of this document without the express prior written consent of Xtralis.

Disclaimer

The contents of this document is provided on an "as is" basis. No representation or warranty (either expressed or implied) is made as to the completeness, accuracy or reliability of the contents of this document. The manufacturer reserves the right to change designs or specifications without obligation and without further notice. Except as otherwise provided, all warranties, expressed or implied, including without limitation any implied warranties of merchantability and fitness for a particular purpose are expressly excluded.

General Warning

This product must only be installed, configured and used strictly in accordance with the General Terms and Conditions, User Manual and product documents available from Xtralis. All proper health and safety precautions must be taken during the installation, commissioning and maintenance of the product. The system should not be connected to a power source until all the components have been installed. Proper safety precautions must be taken during tests and maintenance of the products when these are still connected to the power source. Failure to do so or tampering with the electronics inside the products can result in an electric shock causing injury or death and may cause equipment damage. Xtralis is not responsible and cannot be held accountable for any liability that may arise due to improper use of the equipment and/or failure to take proper precautions. Only persons trained through an Xtralis accredited training course can install, test and maintain the system.

Liability

You agree to install, configure and use the products strictly in accordance with the User Manual and product documents available from Xtralis.

Xtralis is not liable to you or any other person for incidental, indirect, or consequential loss, expense or damages of any kind including without limitation, loss of business, loss of profits or loss of data arising out of your use of the products. Without limiting this general disclaimer the following specific warnings and disclaimers also apply:

Fitness for Purpose

You agree that you have been provided with a reasonable opportunity to appraise the products and have made your own independent assessment of the fitness or suitability of the products for your purpose. You acknowledge that you have not relied on any oral or written information, representation or advice given by or on behalf of Xtralis or its representatives.

Total Liability

To the fullest extent permitted by law that any limitation or exclusion cannot apply, the total liability of Xtralis in relation to the products is limited to:

- i. in the case of services, the cost of having the services supplied again; or
- ii. in the case of goods, the lowest cost of replacing the goods, acquiring equivalent goods or having the goods repaired.

Indemnification

You agree to fully indemnify and hold Xtralis harmless for any claim, cost, demand or damage (including legal costs on a full indemnity basis) incurred or which may be incurred arising from your use of the products.

Miscellaneous




If any provision outlined above is found to be invalid or unenforceable by a court of law, such invalidity or unenforceability will not affect the remainder which will continue in full force and effect. All rights not expressly granted are reserved.

Document Conventions

The following typographic conventions are used in this document:

Convention	Description
Bold	Used to denote: emphasis. Used for names of menus, menu options, toolbar buttons
<i>Italics</i>	Used to denote: references to other parts of this document or other documents. Used for the result of an action.

The following icons are used in this document:

Convention	Description
	Caution: This icon is used to indicate that there is a danger to equipment. The danger could be loss of data, physical damage, or permanent corruption of configuration details.
	Warning: This icon is used to indicate that there is a danger of electric shock. This may lead to death or permanent injury.
	Warning: This icon is used to indicate that there is a danger of inhaling dangerous substances. This may lead to death or permanent injury.

Contact Us

UK and Europe	+44 1442 242 330
D-A-CH	+49 431 23284 1
The Americas	+1 781 740 2223
Middle East	+962 6 588 5622
Asia	+86 21 5240 0077
Australia and New Zealand	+61 3 9936 7000
www.xtralis.com	

Codes and Standards Information for Air Sampling Smoke Detection

We strongly recommend that this document is read in conjunction with the appropriate local codes and standards for smoke detection and electrical connections. This document contains generic product information and some sections may not comply with all local codes and standards. In these cases, the local codes and standards must take precedence. The information below was correct at time of printing but may now be out of date, check with your local codes, standards and listings for the current restrictions.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures; re-orientate or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment to a power outlet which is on a different power circuit to the receiver or consult the dealer or an experienced radio/television technician for help.

FDA

This Xtralis product incorporates a laser device and is classified as a Class 1 laser product that complies with FDA regulations 21 CFR 1040.10. The laser is housed in a sealed detector chamber and contains no serviceable parts. The laser emits invisible light and can be hazardous if viewed with the naked eye. Under no circumstances should the detector chamber be opened.

FM Hazardous Applications

3611 Hazardous Approval Warning: Exposure to some chemicals may degrade the sealing of relays used on the detector. Relays used on the detector are marked "TX2-5V", "G6S-2-5V" or "EC2-5NU".

VESDA detectors must not be connected or disconnected to a PC while the equipment is powered in an FM Division 2 hazardous (classified) location (defined by FM 3611).

FM Approved Applications

The product must be powered from VPS-100US-120 or VPS-100US-220.

ONORM F3014

ONORM F3014, transport times for all tubes (including capillaries) must not exceed 60 seconds from any hole. This means that the predesigned pipe networks that include capillaries cannot be used.

AS1603.8

The performance of this product is dependent upon the configuration of the pipe network. Any extensions or modifications to the pipe network may cause the product to stop working correctly. You must check that ASPIRE2 approves alterations before making any changes.

ASPIRE2 is available from your VESDA distributor.

AS1851.1 2005

Maintenance Standards. Wherever this document and the AS1851.1 differ, AS1851.1 should be followed in preference to this document.

Regional regulatory requirements and notices for the VLC

UL

For open area protection the fire alarm threshold (signal) that initiates an evacuation procedure via the Fire Alarm Panel must not be set less sensitive than 0.625%/ft. The detector can send this signal via the Fire Alarm Panel Output signal or the Pre-Alarm output signal.

Through validation testing, Underwriters Laboratories Inc. has verified that VESDA ECO gas detectors, when installed within the sample pipe network, present no significant effects on the smoke detection performance of the unit. The use of the ASPIRE2 calculation software is required to verify system design performance with all devices included in the design.

European Installations

The product must use a power supply conforming to EN54: Part 4.

EN54-20

The product must use a power supply conforming to EN 54-4.

The product is compliant with EN 54-20 sensitivity requirements provided the following conditions are met:

- For a Class A detector, hole sensitivity must be better than 1.5% obscuration/m and transport time less than 60 seconds
- For a Class B detector, hole sensitivity must be better than 4.5% obscuration/m and transport time less than 90 seconds
- For a Class C detector, hole sensitivity must be better than 10% obscuration/m and transport time less than 120 seconds

These limits should be verified using ASPIRE2 during the design of the sampling pipe network.

The product is compliant with EN 54-20 flow monitoring requirements provided the following conditions are met:

- The minor low and minor high flow thresholds should be set at 85% and 115% respectively
- The flow through the detector predicted by ASPIRE2 should be in the range 20 to 65 lpm

Additional information:

- Class A detectors passed EN 54-20 approvals testing with 30 holes and 0.05% obscuration/m detector sensitivity
- Class B detectors passed EN 54-20 approvals testing with 36 holes and 0.09% obscuration/m detector sensitivity
- Class C detectors passed EN 54-20 approvals testing with 40 holes and 0.165% obscuration/m detector sensitivity

Approvals

- UL
- ULC
- FM
- CCC
- ActivFire
- CE
- LPCB
- VdS
- NF
- VNIPO
- EN 54-20

Regional approvals listings and regulatory compliance vary between VESDA product models. Refer to www.xtralis.com for the latest product approvals matrix.

Document: 13718_A0

Revision: A

Build: 0

Part Number: 18935

Table of Contents

1	Introduction	3
2	Cabling Requirements	5
2.1	Power Cables	5
2.2	Data Cables	5
3	Specifications	7
4	Dimensions	9
5	Battery Backup	11
5.1	Backup battery size calculation sheet	11
6	Installation	13
6.1	Check Procedure Before Installation	13
6.2	Remove Front Cover	14
6.3	Removal of Plastic Plugs for Cable Entry	14
6.4	Securing the Mounting Bracket	14
6.5	Attaching the Detector onto the Bracket	15
6.6	Connecting the Air Sampling Pipe	16
6.7	Cabling Using Glands and Conduits	16
6.8	Procedure to Terminate Wires to the Termination Card	18
6.9	Terminating the Power Wires to the Termination Card	18
6.10	Connecting the VESDAnet wires to the Termination Card (VN model only)	19
6.11	Terminating the Relay Wires to the Termination Card	19
6.12	Terminating the Auxiliary Wires to the Termination Card	20
6.13	Closing the VLC	20
6.14	Pipe Bonding Check	20
7	Power Up	21
7.1	Power Up the System	21
8	Preliminary System Checks	23
8.1	Logging On to the System	23
8.2	Normalize the Air Flow and Clearing Air Flow Faults	23
8.3	VESDAnet Communication Check (For VN Model only)	24
8.4	Basic Pass/Fail Smoke Test	24
9	Installation Checklist	25
10	Maintenance and Parts Replacement	27
10.1	Exploded view of VESDA VLC components	28
10.2	Opening the Detector	28
10.3	Closing the Detector	28
10.4	Replacing the Air Filter Cartridge	28
10.5	Replacing the Aspirator	29

This page is intentionally left blank.

1 Introduction

Scope of this Guide

This guide is intended for installation technicians to be able to install, perform basic power and preliminary device checks for the VESDA VLC detector. It does not cover information for commissioning. All VESDA equipment is to be commissioned by personnel who have attended a VESDA accreditation course.

Use the checklist in Chapter 9 to verify that the installation has been correctly completed. Fill out the details in the checklist sheet for the site and submit it to the appropriate personnel.

Cautions

- The Detector must only be installed by VESDA accredited personnel.
- The performance of the system depends on the pipe network that was designed for the site. Any alteration to the pipe network may alter the performance of the system. The ASPIRE2 design tool is to be used to verify the suitability of any pipe network design and subsequent alterations. ASPIRE2 is available from www.xtralis.com or your authorized representative.
- The IP rating for the VESDA VLC is IP 30. This rating indicates the device is not to be installed where there is the possibility of any water or liquid falling onto the device.

Attention :

- Le détecteur doit être installé uniquement par un personnel accrédité VESDA.
- L'efficacité du système dépend de la conception du réseau de prélèvement. Toute modification au réseau pourra changer les capacités du système. Il est nécessaire de vérifier les capacités aérauliques du système avec le logiciel ASPIRE2. ASPIRE2 est disponible auprès de votre distributeur.
- L'Indice de Protection du VLC est estimé à IP 30. Cet indice indique qu'il ne faut pas installer l'appareil dans une zone où l'eau puisse ruisseler sur l'appareil.

This page is intentionally left blank.

2 Cabling Requirements

The terminals on the termination card in the VESDA VLC will accept wire sizes up to 2.5mm² (12 AWG).

2.1 Power Cables

Use the power ratings for the detector to determine the required wire sizes.

The power requirements for the detector to operate are as follows:

- Operating voltage: 18 VDC to 30 VDC
- Current consumption: 225 mA max (No Alarm), 245 mA max (With Alarm)

2.2 Data Cables

The recommended RS485 data cable for interconnecting to other detector units on the VESDAnet loop is Belden 9841 (or equivalent). The cable characteristics are as follows:

- 24 AWG, Twisted pair, Shielded, 120 ohms impedance

The maximum specified length for the RS485 cable between any two devices on the VESDAnet network is 1300m (4000ft).

This page is intentionally left blank.

3 Specifications

Table 3-1: VESDA VLC detector specifications

Supply Voltage	18 to 30 VDC
Power Consumption	5.4 W during normal operation, 5.9 W with alarm on
Current Consumption	225 mA at 24 VDC normal operation, 245 mA with alarm on
Fuse Rating	1.6A
Dimensions (WHD)	225 mm x 225 mm x 85 mm (8 7/8" x 8 7/8" x 3 3/8")
Weight	1.9kg (4.2 lbs)
Operating Conditions (To operate the VLC detector outside these parameters please contact your nearest Xtralis Office)	<ul style="list-style-type: none"> • Ambient: 0°C to 39°C (32°F to 103°F)* • Tested: -10°C to +55°C (14°F to 131°F) • Sampled Air: -20° to 60° C (-4° to 140° F) • Humidity: 10-95% RH, non-condensing
Storage Conditions (Non-operational)	<ul style="list-style-type: none"> • Battery life: up to 2 years • Humidity: dry (<95%) • Temperature: 0° to 85° C, • Must not exposed to sunlight or other radiation sources
Sampling Pipe Network	<ul style="list-style-type: none"> • Maximum area of coverage: 800 m² (8000 sq. ft.) • Maximum Single Pipe Length: 80 m (max. 20 holes) • Maximum branched (2) Pipe Lengths: 50 m each (max. 20 holes) • Computer Design Tool:ASPIRE2
Pipe Size	<ul style="list-style-type: none"> • ID: 15-21 mm (0.874 in) • OD: 25 mm (1.050 in.)
Relays	3 relays, contacts rated 2A @ 30 VDC Programmable to latched or non-latched states
Relays Default Configuration	<ul style="list-style-type: none"> • Fire • Pre-Alarm • Alert/Fault (Maintenance and Isolate) • Programmable 0 - 60 sec. time delay for each relay
IP Rating	IP30
Cable Access	4 x 25 mm (1 in) cable entries
Cable Termination	Screw terminal blocks (0.2-2.5 sq mm, 30-12 AWG)
Detector Resolution	0.005 to 20.00% obs/m (0.0015 to 6.25% obs/ft.)
Threshold Setting Range	<ul style="list-style-type: none"> • Alert: 0.005 - 1.990% obs/m (0.0015 - 0.6218% obs/ft.) • Pre-Alarm: 0.010 - 1.995% obs/m (0.0031 - 0.6234% obs/ft.) • Fire: 0.015 - 20% obs/m (0.0046 - 6.25% obs/ft.) **
Key Software Features	<ul style="list-style-type: none"> • Event log: Up to 12000 events stored on FIFO basis. • (Volatile Event Log) Smoke level, alarms and faults with time and date stamp • AutoLearn: Minimum 15 minutes, maximum 15 days. (Recommended minimum period 1 day). • During AutoLearn thresholds are NOT changed from pre-set values.

* Product UL listed between 0° to 38°C (32° F to 100° F)

** Factory Default = UL268 = Fire set to 12% obs/m (4% obs/ft.) to comply with UL268. If the factory default is off, the fire threshold can be set up to 20% obs/m (6.25% /ft.)

This page is intentionally left blank.

4 Dimensions


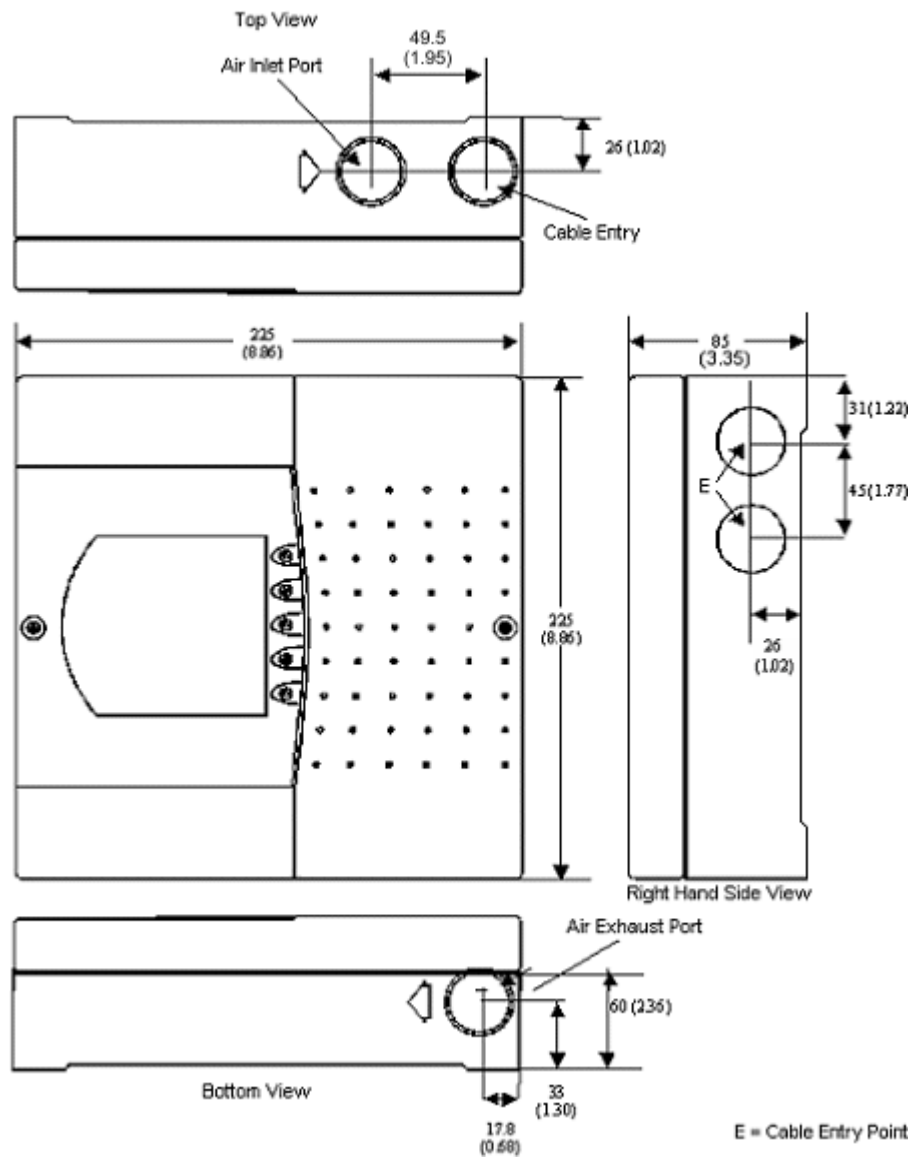


Figure 4-1: Dimensions in mm. (inches) for VESDA VLC

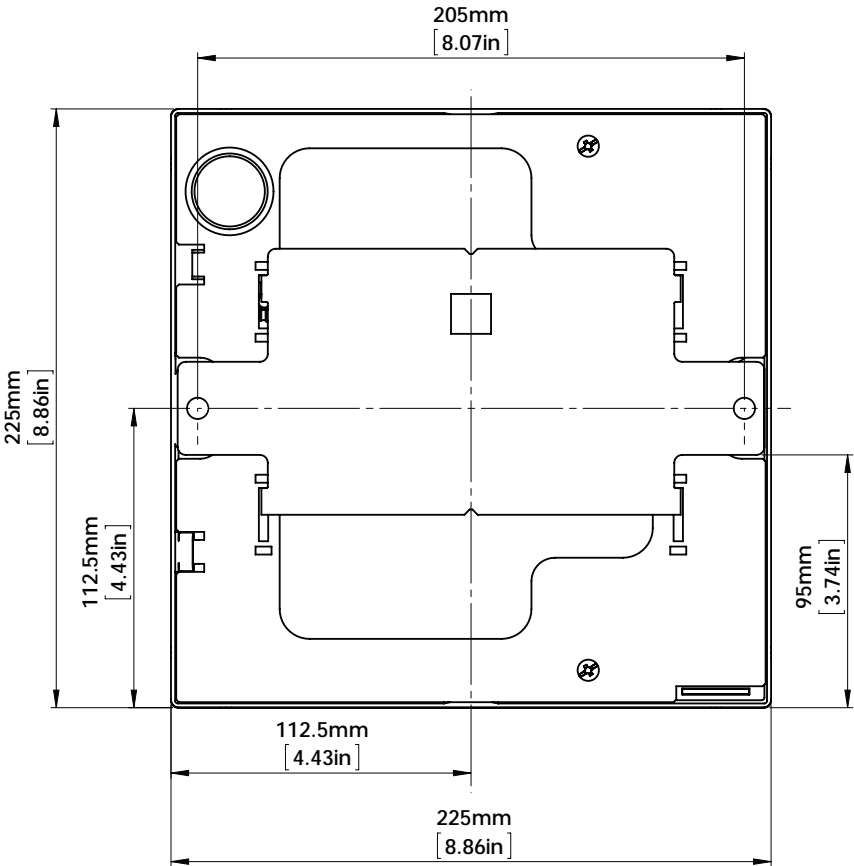

E = Cable Entry Port on rear of enclosure

Figure 4-2: VESDA VLC detector dimensions - rear view

This page is intentionally left blank.

6 Installation

6.1 Check Procedure Before Installation

- Do not install your VESDA VLC if there are any signs of shipping damage to the product. Inform your distributor if there is any damage.
- Check the model of the VESDA VLC is correct as per the design specifications for the site. Refer to the model number located on the bottom of the detector enclosure.
- Identify the location where the detector is to be mounted. The VESDA VLC can be mounted on a wall or a suitable secure surface. There are two allowable mounting positions (see Figure 6-1) for the VESDA VLC:
 - Mounting the device with the air inlet pipe on the top of the box and with the air exhaust pipe at the bottom. (Normal Orientation)
 - Mounting the device with the air inlet pipe at the bottom of the box and with the air exhaust pipe on the top. (Inverted Orientation)
- Verify that the selected mounting location is suitable to fit the detector by test fitting the VESDA VLC onto the actual mounting position. Ensure there is 150mm (6in) of clear space around the air inlet pipe and cable entry points to allow for pipe and conduit entry.
- Verify that the cable entry points and the sampling air pipes are at the correct locations.
- Determine the type of fasteners required to attach the mounting bracket onto the mounting surface. The size of the screw holes on the mounting plate is 8mm (1/3in).

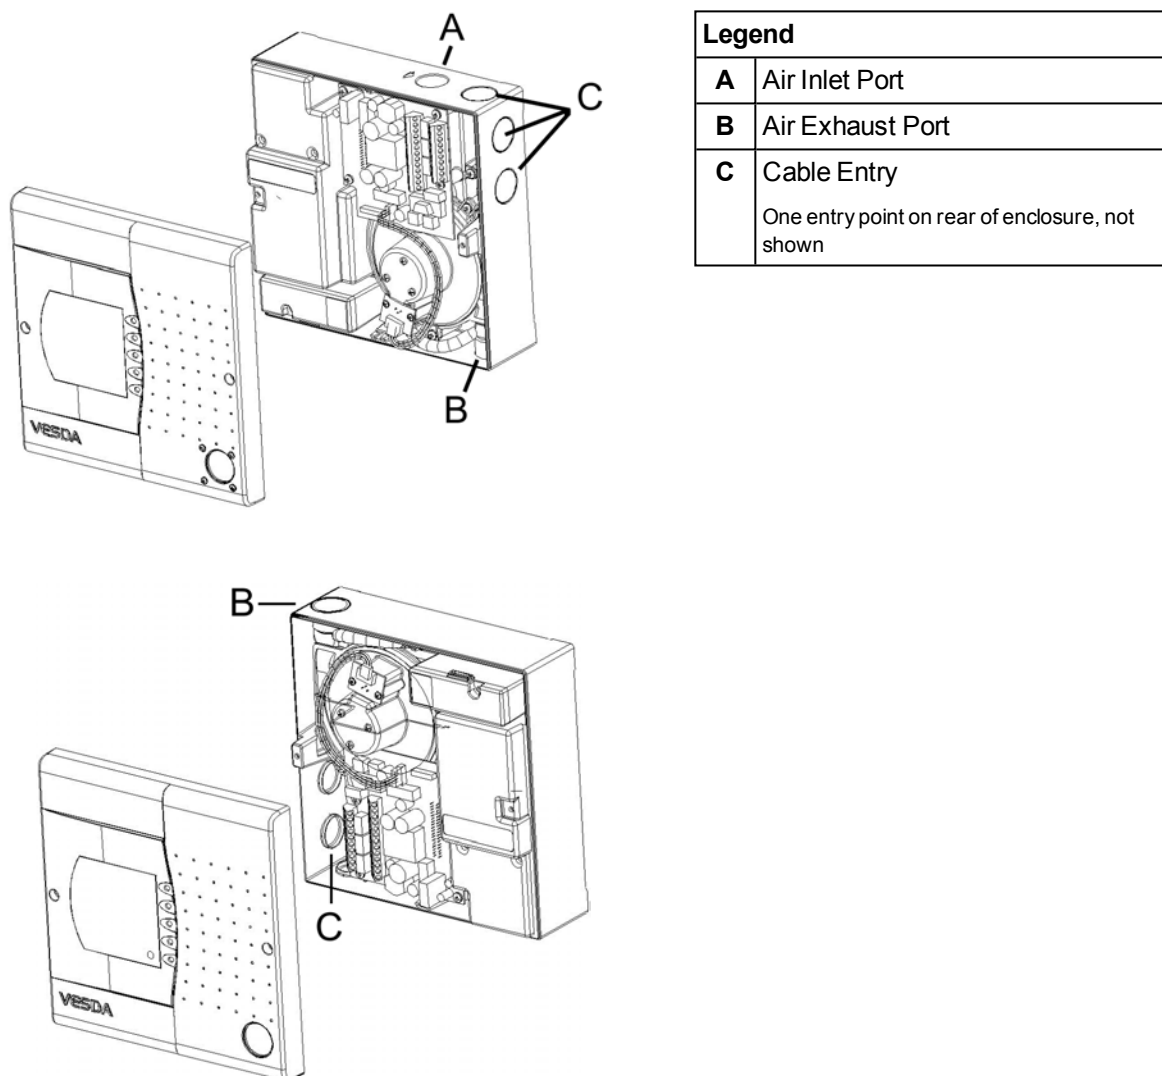


Figure 6-1: VESDA VLC Orientation, Normal (left), Inverted (right)

6.2 Remove Front Cover

- Unscrew the two Philips head screws located on the left and right hand sides of the front cover.
- Remove the cover. The front cover is held to the main enclosure with a plastic tie. There is a cable loom labelled LED CARD that connects the termination card in the enclosure to the LED card located behind the front cover. If you need to separate the front cover from the main enclosure perform steps (c) to (d), otherwise go to Section 6.3.
- Remove the LED CARD cable connector from its socket on the termination card.
- Twist the plastic tie by 90 degrees on the cover side and slip the tie out through the slot.

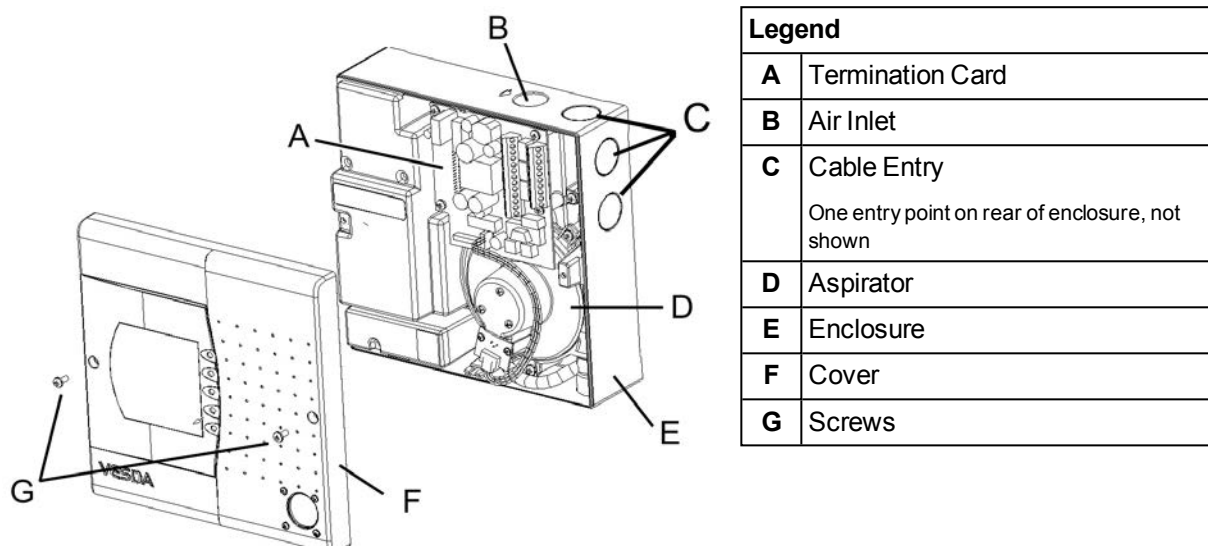


Figure 6-2: VESDA VLC with Front Cover removed. (Normal Orientation)

6.3 Removal of Plastic Plugs for Cable Entry

- Determine the cable entry holes to be used. Refer to Figure 6-2.
- Use your thumb to push out the hole plugs from inside the enclosure.

6.4 Securing the Mounting Bracket



Warning: Make sure that there are no electrical wires or plumbing behind the mounting position before drilling. Ensure the mounting position is flat.



Avertissement : S'assurer qu'il n'y a aucun fil électrique ou tuyauterie derrière l'emplacement avant de percer les trous. S'assurer que le mur est plein à l'endroit de fixation de la plaque.

- Place the mounting bracket onto the surface and mark out the two mounting screw holes. Refer to Figure 6-3 for dimensions. Use a spirit level to ensure the bracket is level.
- Use the appropriate fasteners to suit the mounting surface. Secure the bracket to the surface.

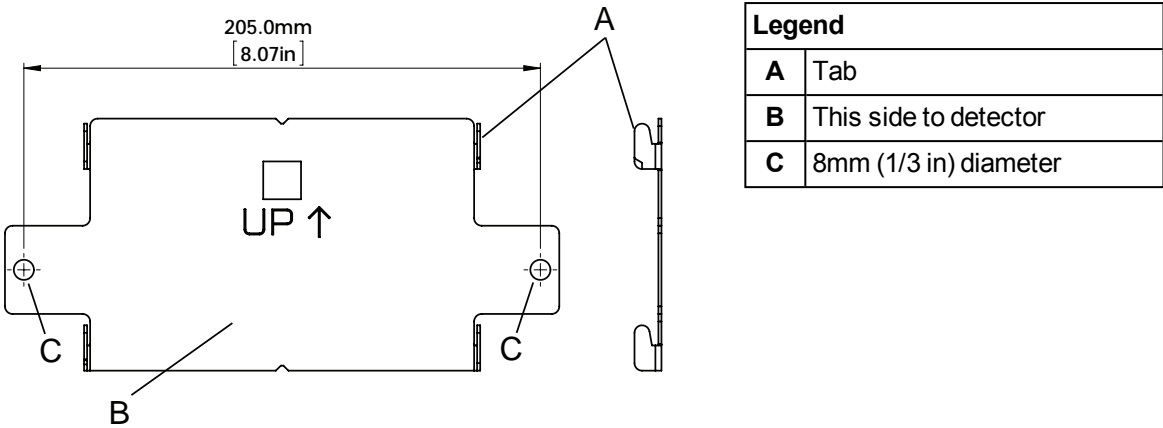


Figure 6-3: Hole Dimensions and Orientation of Mounting Bracket

6.5 Attaching the Detector onto the Bracket

- a. Determine the required orientation for the VESDA VLC.
- b. Mount the detector onto the bracket by placing the four rectangular slots located on the rear of the detector onto the four bracket tabs. Refer to Figure 6-4.
- c. Slide the device downwards until it locks onto the tabs and screw in the anti tamper screw. Refer to Figure 6-5 for screw location.
- d. Check the unit does not slide off its bracket.

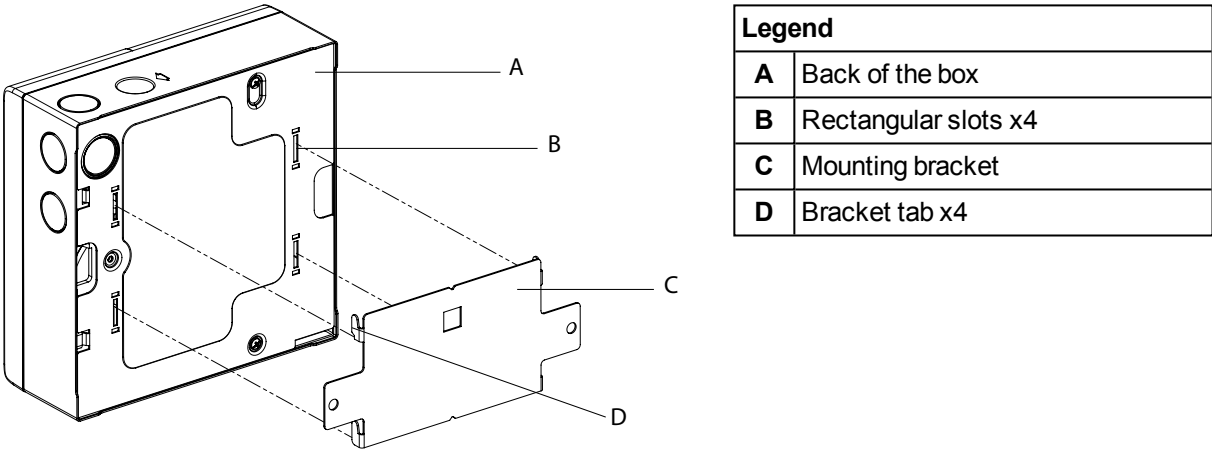


Figure 6-4: Mounting the Detector onto the Mounting Bracket

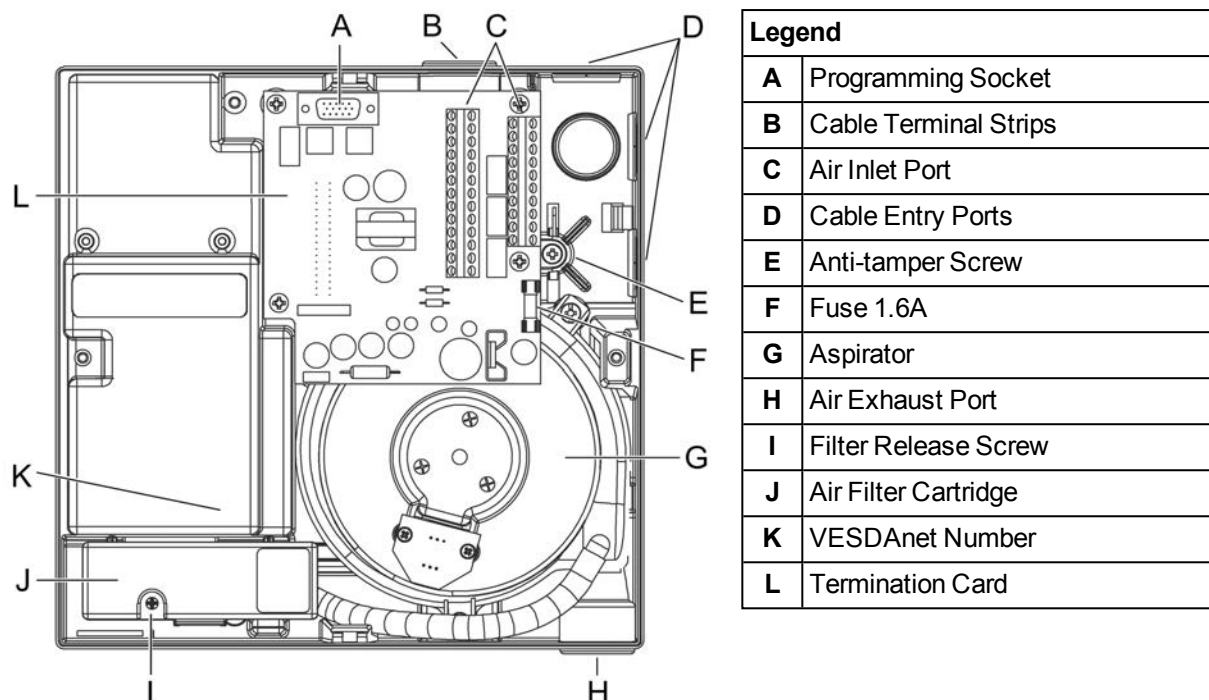


Figure 6-5: Location of Anti Tamper Screw and other Components inside the Enclosure

6.6 Connecting the Air Sampling Pipe

The air inlet port is designed to fit a standard pipe of 25mm (1in) OD. A tapering of the air inlet port prevents the pipe from being inserted beyond 15mm (5/8in).

Note: Where it is common practice to use $\frac{3}{4}$ inch pipe which has a 1 $\frac{1}{16}$ inch OD, a suitable adaptor should be used to connect the pipe to the inlet manifold. Such an adaptor is supplied with the VESDA VLC in the appropriate territories.

- De-burr and square off the end of the sampling air pipe. Ensure the pipe is free from debris.
- Remove the plugs from the inlet and exhaust ports.
- Insert the pipe into the inlet port ensuring a firm fit. DO NOT glue this connection.
- Pipe the exhaust when necessary.



Caution: DO NOT GLUE THE AIR INLET AND EXHAUST PIPE CONNECTION – THIS ACTION WILL VOID YOUR WARRANTY.
Glued connections makes disconnecting the air sampling pipe from the VESDA VLC for maintenance extremely difficult and will result in damage to the equipment.



Attention : NE PAS COLLER LES TUBES D'ENTRÉE D'AIR ET DE REFOULEMENT AU NIVEAU DU DETECTEUR.
Un raccordement collé rendra indémontable le tube de prélèvement d'air du VLC et rendra les opérations de maintenance extrêmement difficile, de plus, il pourra endommager l'appareil.


6.7 Cabling Using Glands and Conduits

6.7.1 Using Glands

- If using cable glands, use the correct gland size to fit the 25mm (1in) Ø cable entry hole.
- Run the wires through the glands and into the VESDA VLC enclosure. Use your local codes and electrical standards for cabling.

6.7.2 Using Conduits


- Terminate the conduits at the cable entry holes on the sides of the box using the appropriate conduit connectors.
- Run the wires through the conduits and into the VESDA VLC enclosure. Use your local codes and electrical standards for cabling.

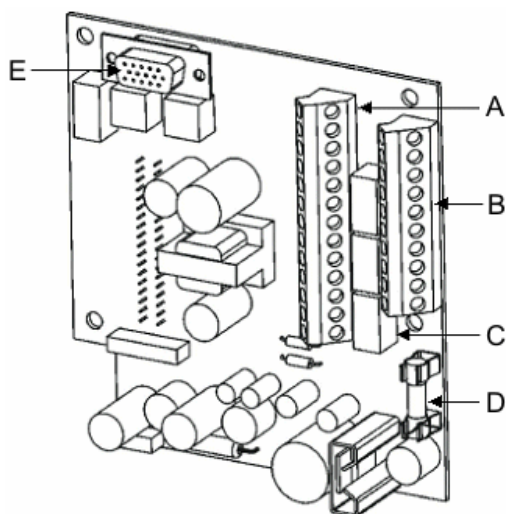

Terminal A		Terminal B	
1	Bias (-) (GND)	1	Shield
2	Reset (-) (GPI)	2	VESDAnet A (-)
3	Reset (+) (GPI)	3	VESDAnet A (+)
4	Bias (+)	4	Shield
5	LED (-) (GND)	5	VESDAnet B (-)
6	LED (+)	6	VESDAnet B (+)
7	FIRE (NO)	7	Power (-)
8	Fire (C)	8	Power (+)
9	Pre-Alarm (NO)	9	Power (-)
10	Pre-Alarm (C)	10	Power (+)
11	Fault (NO)	NC = Normally Close NO = Normally Open C = Common	
12	Fault (C)		
13	Fault (NC)		

Legend			
A	Terminal A	D	1.6 Amp Fuse
B	Terminal B	E	VESDAnet Socket
C	Relays		

Figure 6-6: Terminal Pins Location on Termination Card for VN model

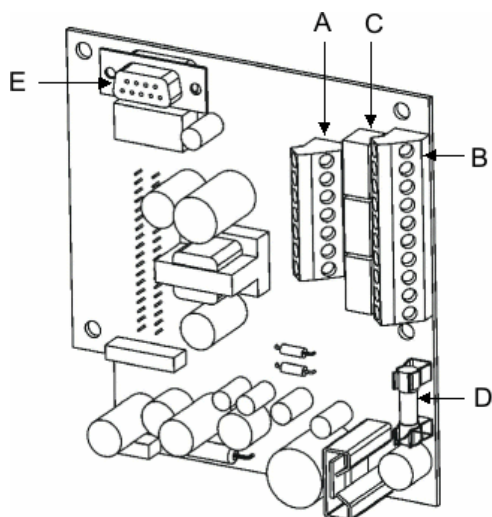

Terminal A		Terminal B	
1	FIRE (NO)	1	Bias (-) (GND)
2	Fire (C)	2	Reset (-) (GPI)
3	PRE-ALARM (NO)	3	Reset (+) (GPI)
4	PRE-ALARM (C)	4	Bias (+)
5	FAULT (NO)	5	LED (-) (GND)
6	FAULT (C)	6	LED (+)
7	FAULT (NC)	7	Power (-)
NC = Normally Close NO = Normally Open C = Common		8	Power (+)
		9	Power (-)
		10	Power (+)

Legend			
A	Terminal A	D	1.6 Amp Fuse
B	Terminal B	E	VESDAnet Socket
C	Relays		

Figure 6-7: Terminal Pins Location on Termination Card for RO Mode

6.8 Procedure to Terminate Wires to the Termination Card

Use the appropriate wiring standards for your country or use the following suggested procedure listed below.

- a. Strip off 5 to 10mm (1/5 to 2/5 in) of outer insulation from each wire.
- b. Twist wire strands together for multi-stranded wire only.
- c. Insert wire into terminal.
- d. Tighten terminal screw.
- e. Check the wire is firmly attached to the terminal.
- f. Ensure no bare wires are exposed at the terminals. The wire insulation must reach to the end of the terminal.
- g. Check the terminations are correct by referring to the appropriate circuit diagrams in this guide.

6.9 Terminating the Power Wires to the Termination Card

Refer to Figure 6-6 or Figure 6-7 for the power terminals location on the termination card.

Connect the power wires to the Power terminals as shown in Figure 6-8.

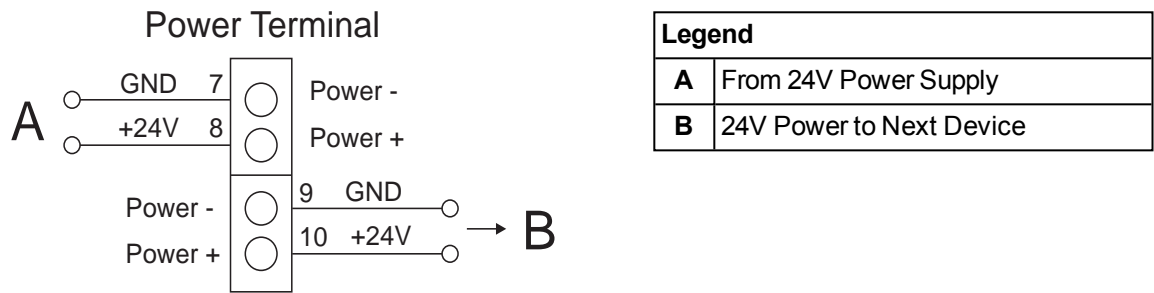


Figure 6-8: Wire Connection Details for Power

6.10 Connecting the VESDAnet wires to the Termination Card (VN model only)

- Refer to Figure 6-6 for the network terminals location on the termination card.
- Connect the VESDAnet wires as shown in Figure 6-9. This diagram is only an example for five detectors. This wiring method is similar for two or more detectors.
- Maintain the wiring polarity throughout the network and do not leave any VESDAnet terminals unconnected.

Notes:

- While an Open Loop configuration is possible (refer to System Design Manual), it is strongly recommended that the Closed Loop configuration be installed to achieve a fault tolerant loop.
- When a VN model detector is not used in a VESDAnet loop and is to be used as a stand-alone detector the VESDAnet terminals must be wired as per Figure 6-10.

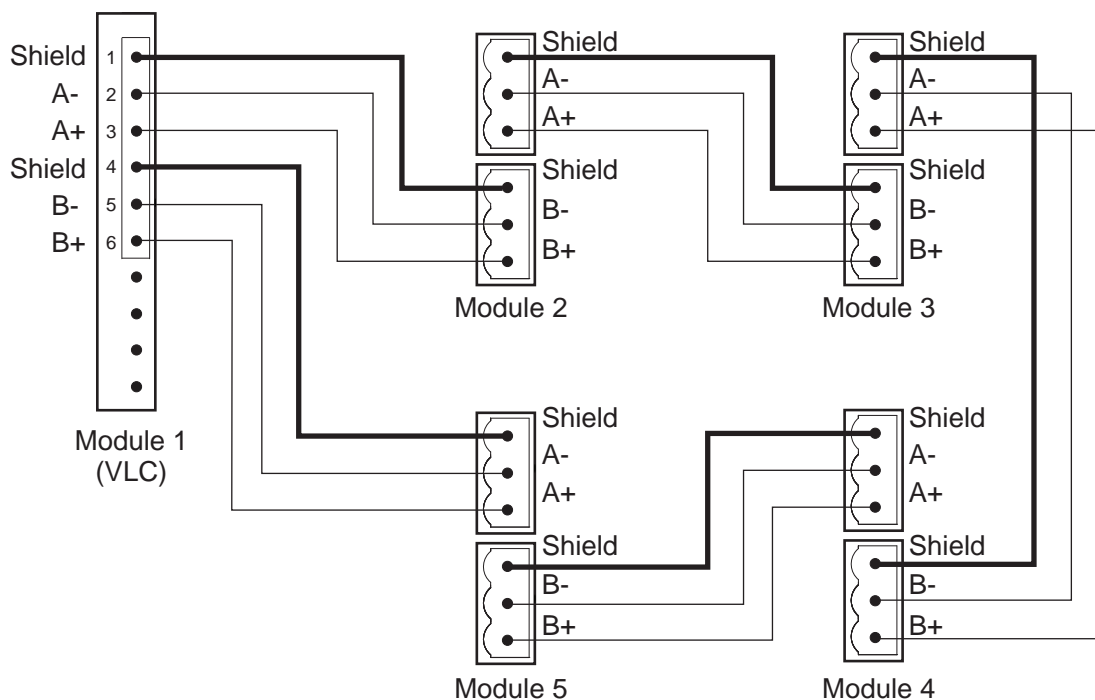


Figure 6-9: Wiring details for VESDAnet

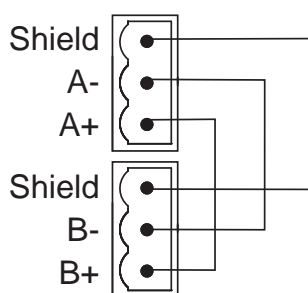


Figure 6-10: Wiring details for standalone VN model detector

6.11 Terminating the Relay Wires to the Termination Card

- Refer to Figure 6-6 or Figure 6-7 for the relay terminals location on the termination card.
- Connect the relay wires to the terminals as per Figure 6-11 and your site requirements.

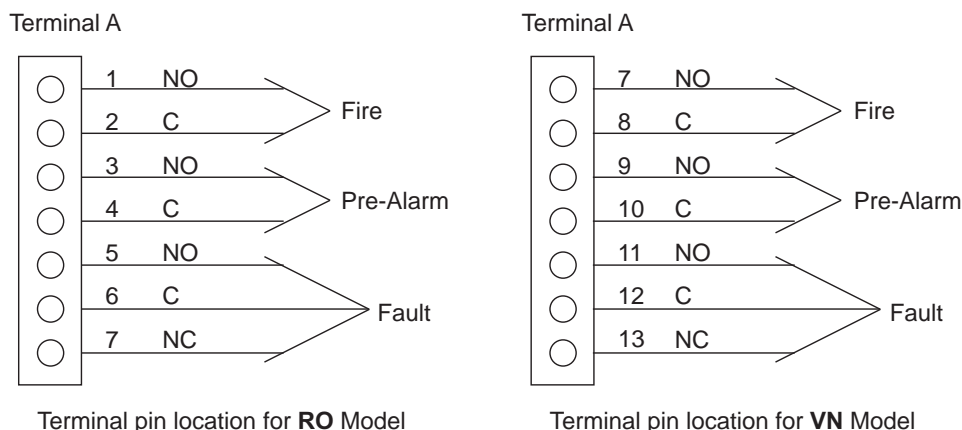


Figure 6-11: Wire Connections Details for Relays

6.12 Terminating the Auxiliary Wires to the Termination Card

- Refer to Figure 6-6 or Figure 6-7 for the Reset, LED and Bias terminals on the termination card for the RO or VN model.
- The function for these outputs are as follows:-

LED +/-	This output terminal provides a maximum of 5V, 15mA via a 220 ohm resistor to power a remote LED.
Bias +/-	This output provides a 10V supply via a 1Kohm resistor to power the remote Reset/Isolate switch when connected as per Figure 6-12.
Reset +/-	This input terminal has three functions, (Mains OK, Standby and Reset) and requires an input voltage supply between 5V to 24VDC to operate.

- Terminate the RESET, LED and Bias wires as per your site requirements or with reference to Figure 6-12

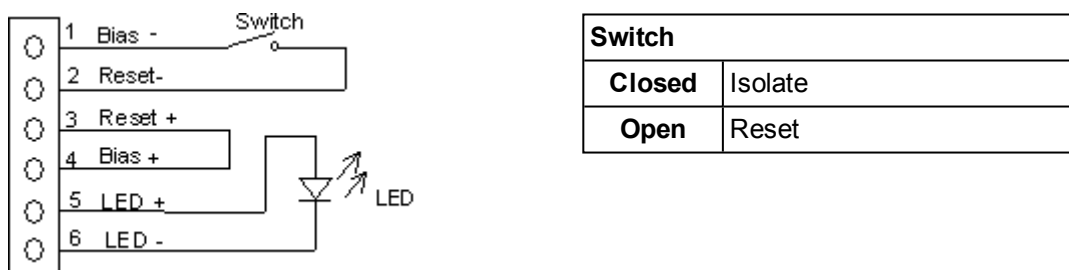


Figure 6-12: Wire Connection Details for Auxiliaries

6.13 Closing the VLC

- Tie all wires together into neat looms using cable ties.
- Reattach the front cover to the plastic tie and connect the **LED CARD** connector to the socket on the termination card if you have removed the cover and the connector.
- Perform the power up as per Chapter 7 and preliminary checks as per Chapter 8.
- Close up the VESDA VLC and secure the cover with the two screws.

6.14 Pipe Bonding Check

- Check all the plastic pipe connecting joints are fully sealed and bonded with glue to eliminate unwanted air leaks. If applicable, check all metal pipe joints are sealed.
- Check the pipe joint at the air inlet to the VESDA VLC is not bonded and fits firmly into the air inlet socket.
- Check all pipes are securely attached to a mounting surface with the proper fasteners.
- Check the number and sizes of the sampling air holes on the pipes are correct.
- Check the routing of the pipes is correct with reference to the site plan.

7 Power Up



Caution: Powering up the system must be done by VESDA accredited personnel.



Attention : La mise sous tension doit être effectuée par du personnel accrédité VESDA.

7.1 Power Up the System

- a. Remove the 1.6A fuse on the termination card.
- b. Turn on the power to the detector.
- c. Check the DC voltage at the **Power** terminals on the termination card is between **18 VDC to 30 VDC**. Disconnect the power immediately if the supply voltage is above **30VDC** or less than **18VDC** and troubleshoot the fault.
- d. Replace the fuse when the measured voltage is OK. The system takes approximately 15 seconds to power up during which time an LED test sequence is performed.
- e. If the system fails to power up:-
 - Check all the power wires are securely connected to the Power terminals.
 - Check the polarities of the power wires are correctly terminated.
 - Check for a blown fuse on the termination card. Refer to Figure 6-5 for the fuse location.

Note: The detector may show faults immediately after power up and this is normal. Reset the unit by pressing the RESET switch on the front cover of the detector to unlatch the relays and fault lights. The fault light on the front cover will light up and this is normal. Proceed to Chapter 8.

This page is intentionally left blank.

8 Preliminary System Checks

Perform the following preliminary system checks before commissioning.

- a. Logging onto the system with a PC or a LCD Programmer. Refer to Section 8.1.
- b. Normalise the airflow. Refer to Section 8.2.
- c. VESDAnet communication checks for VN models only. Refer to Section 8.3.
- d. Basic pass/fail smoke test. Refer to Section 8.4.

8.1 Logging On to the System

Check with your distributor for the User level and PIN number to log on to the system.

8.1.1 Logging on with a PC

To program the VLC (RO) detector with a PC

- a. Connect the RS232 data cable from the PC output port to the 9 pin programming socket on the termination card in the detector.
- b. Run Xtralis VSC from the PC.
- c. Enter your User level and PIN number.

To program the VLC (VN) detector with a PC

- a. A PC-LINK HLI device must be connected between the PC and the 15-pin VESDAnet socket to program the VN model detector.
- b. Connect the RS232 data cable from the PC output port to the 9-pin socket on the PC-Link HLI device.
- c. Connect the 15-pin output port of the PC-LINK HLI device to the 15-pin VESDAnet socket on the termination card in the detector or to any remote VESDAnet sockets if wired to the detector.
- d. Run Xtralis VSC from the PC.
- e. Enter your User level and PIN number.

8.1.2 Logging on with a LCD Programmer (For VN Model Only)

Connect the programmer lead to either one of the following sockets:

- To the 15-pin, programming socket on the termination card; or
- To a remote VESDAnet socket within the VESDAnet loop

Wait for the programmer to power up. Log in your User level and PIN number into the programmer.

8.2 Normalize the Air Flow and Clearing Air Flow Faults

- a. List all the VESDAnet numbers for all detectors to be normalized.
- b. Refer to Section 8.2.1 for LCD programming or Section 8.2.2 for PC programming.
- c. It takes approximately 11 minutes for the system to normalize during which time the Green OK LED flashes twice every second to indicate that normalization is in progress.
- d. Check the airflow level is approximately 100% when normalization is completed.
- e. Press the Reset/Isolate button on the front cover to reset the detector after Normalization. All the fault lights should go off. If any of the fault lights are lit consult the Status menu on the programmer or the Active Event List on Xtralis VSC to determine the faults and consult your System Design Manual to rectify.
- f. If the unit fails to normalize it is because the measured airflow may be too low. Check for blockages in the sampling air pipe and check that the exhaust plug has been removed.

8.2.1 Using a LCD Programmer (For VN Model only)

- a. Refer to the LCD menu tree supplied with each VESDA VLC (VN) detector.
- b. Select the detector to be normalized from the displayed list of devices.
- c. Select Setup by Zone/Type menu ↵ Normalize ↵ Start ↵ (↵ = Enter Key).
- d. To check the airflow level, go to the Normalize or Status menu after normalizing.

8.2.2 Using a PC

- a. From the View menu select Device View.
- b. Select the detector to be normalized from the displayed list of devices.
- c. From the Device menu, select Normalize Air Flow to start the function.
- d. To check the airflow level, select the Current Flow command under Device menu after normalizing.

8.3 VESDAnet Communication Check (For VN Model only)

Note: This test verifies the VESDAnet system is functioning and all devices connected on VESDAnet are communicating.

- a. List all VESDAnet numbers for all devices connected onto the communication loop.
- b. Refer to Section 8.3.1 for LCD programming or Section 8.3.2 for PC programming.
- c. Verify the VESDAnet number for each device on the network is shown on the list.
- d. If there are some devices not found on the display list, check the VESDAnet cabling to all the devices is correct.

8.3.1 Using LCD Programmer

- a. Go to Show Wiring Order menu and press ↵.
- b. Check the displayed list shows all the connected devices and the VESDAnet number for each device is correct.
- c. Check for any devices not connected and troubleshoot if necessary.

8.3.2 Using a PC

- a. Select Device list from the View menu.
- b. Check the displayed list shows all the connected devices and the VESDAnet number for each device is correct.
- c. Check for any devices not connected and troubleshoot if necessary.

8.4 Basic Pass/Fail Smoke Test

Note: This test verifies the detector will sense smoke. It does not replace any appropriate commissioning test.

- a. Isolate the detector by pressing the Reset key for more than 2 seconds.
- b. Check the Reset/Isolate LED lights up.
- c. Inject smoke into any sampling air hole.
- d. Wait for one of the red LEDs on the front panel to light up.
- e. If the LED does not light up contact a fully trained accredited VESDA engineer.
- f. Reset the detector by pressing the Reset switch once when the smoke test passes.

9 Installation Checklist

Site Name	
Address	
Detector Serial Number(s) and Date of Manufacture	
Name of Installer	
Signature	
Date	

Perform the following checks listed below to ensure that all the necessary items are completed before handing over to a commissioning engineer.

Installation Checks	Yes	No
Were the detector and the mounting bracket intact in the box?		
Is the detector securely locked onto its mounting bracket? Note that the two mounting bracket securing-screws are provided in a separate bag with the detector.		
Is the sampling air pipe firmly connected to the air inlet port? Ensure the pipe is <u>NOT</u> glued.		
Have the power wires been connected to the correct terminals on the detector?		
If required, has the end of line resistor been connected?		
Have the alarm signaling wires been terminated to the correct terminals of the detector?		
Are the VESDAnet terminals looped back on a standalone VESDAnet enabled detector? Refer to Section 6.10 on page 19.		
Is the exhaust pipe firmly fitted to the exhaust port? Ensure the pipe is NOT glued.		
Has the front cover been replaced correctly?		
Has the basic pass/fail test been performed?		
Has AutoLearn Smoke been performed? Please state the AutoLearn Smoke period _____		
Is the air sampling pipework installed and checked as per the site plans?		

This page is intentionally left blank.

10 Maintenance and Parts Replacement

To maintain the VESDA VLC at its peak performance the maintenance schedule given below should be followed.

To work effectively the VESDA VLC Detector needs to be supported by a well designed Pipe Network.

The Maintenance Schedule includes the maintenance required for the Pipe Network.

Table 10-1: Maintenance schedule

Maintenance Check	Quarterly	Six Monthly	Annually	Biennial
Power Supply ¹	X			
Check Pipe Network ²		X		
Filter Inspection			X	
Pipe Integrity Smoke Test			X	
Check Pipe Flow			X	
Clean Sampling Point				X
Flush Pipe Network				X

1. Depends upon Regional Codes and Standards

2. May require more frequent maintenance depending upon the environment

Note: The frequency of maintenance checks could vary depending upon local codes and standards and the environment of the installation.



Caution: When a VESDA VLC detector has been isolated, no fire warnings will be issued by the VESDA VLC and any fire will go undetected. Prior to any maintenance or testing:

- Inform appropriate supervising authority about the risk associated with isolating a VESDA address (formerly known as a VESDA Zone).
- Ensure that any ancillary devices dependent on the VESDA VLC is/are isolated before work is begun.



Attention : Quand une zone VESDA a été isolée, aucun avertissement d'incendie n'est envoyé par le VESDA VLC et tout incendie ne sera pas signalé. Avant tout entretien ou essai :

- Informez l'autorité compétente du risque associé à l'isolement d'une zone VESDA.
- Vérifiez que tous les appareils accessoires dépendant du détecteur VESDA VLC sont activés par l'isolement avant le début des travaux.

10.1 Exploded view of VESDA VLC components


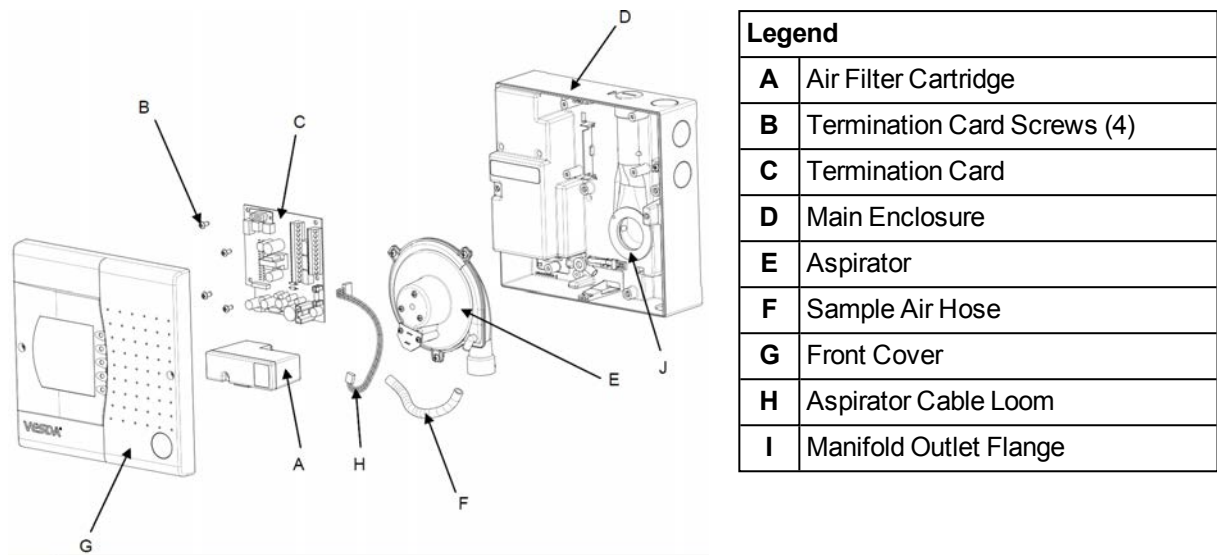


Figure 10-1: Exploded View

10.2 Opening the Detector

1. Undo two Philips head screws on front cover (A).
2. Open front cover (B) and allow cover to hang by the attached plastic strap.

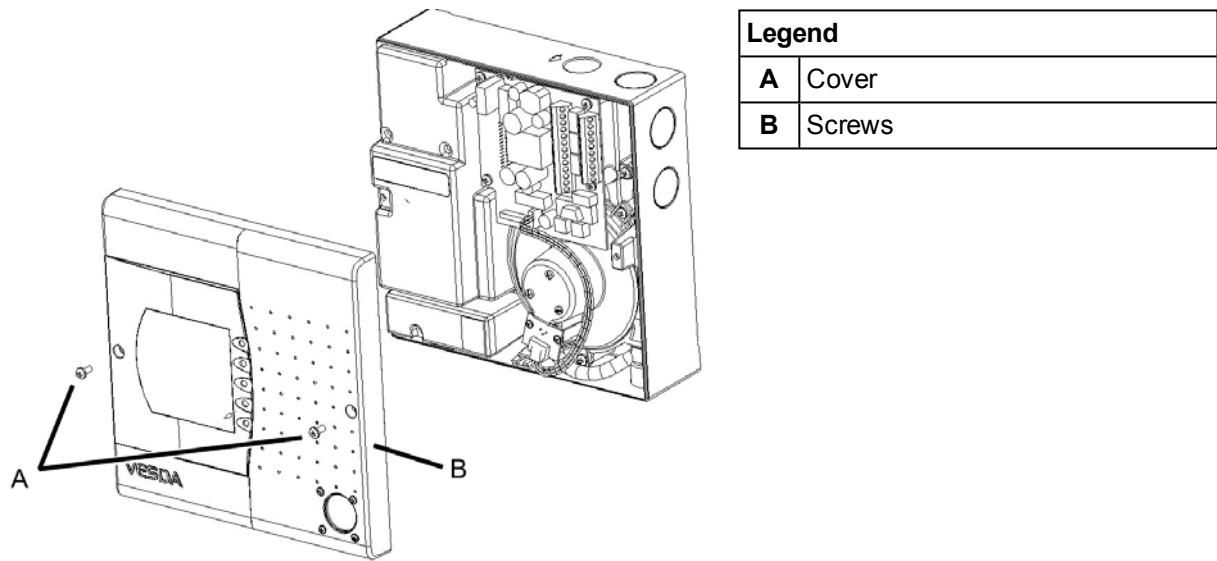


10.3 Closing the Detector

1. Replace the front cover over detector enclosure ensuring the plastic strap and cable loom is not wedged between cover and enclosure.
2. Tighten the two screws (A)

10.4 Replacing the Air Filter Cartridge

Disassembly


1. Locate the air filter cartridge (A) inside the detector compartment.
2. Undo the recessed Philips head filter screw (B).

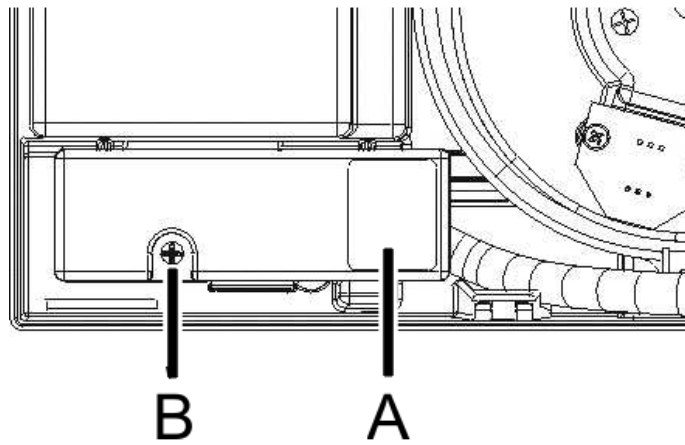**Legend**

A	Air Filter Cartridge
B	Filter Screw

Figure 10-2: Air Filter Cartridge

3. Lift out the air filter cartridge (A).

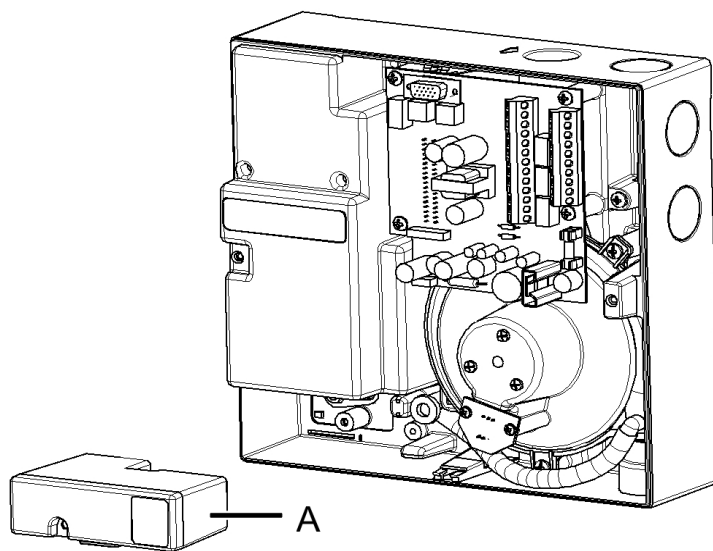**Legend**

A	Air Filter Cartridge
----------	----------------------

Figure 10-3: Air Filter Cartridge Removal


Assembly

1. Insert a new air filter cartridge (A).
2. Tighten filter screw (B).
3. Reset the filter counter by connecting a LCD programmer or a PC with Xtralis VSC software to the programming socket.
4. Using a LCD programmer (VN version only):
 - Enter your user level and PIN number to Log ON to the detector.
 - Initiate the New Filter command located under the Filter menu.
5. Using a PC only (Applicable to RO version) or Using a PC with a PC-Link HLI (Applicable to VN version only):
 - Enter your user level and PIN number to Log ON to the detector.
 - Initiate Reset Filter Settings command located under the Device menu.
6. Close up the detector.

10.5 Replacing the Aspirator

Disassembly


1. Remove the four screws (A) securing the termination card.
2. Disconnect the aspirator cable loom from the connector on the aspirator.
3. Gently pull out termination card (B) from interface card (connected behind).

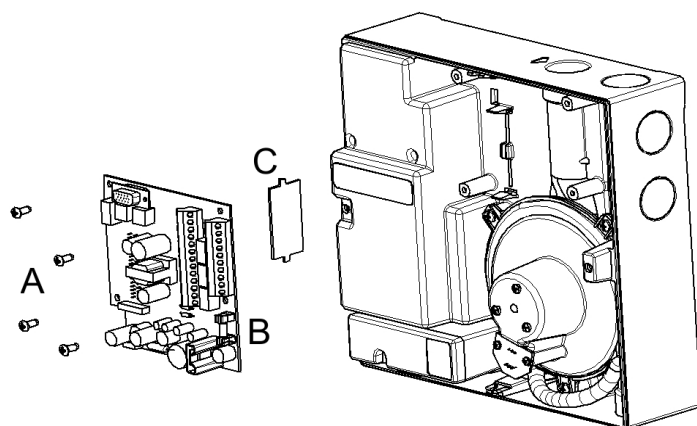

Legend	
A	Screws
B	Termination Card
C	Interface Card Connector

Figure 10-4: Remove Termination Card

4. Be careful not to dislodge any wires connected to the termination card.
5. Leave the termination card suspended by its wires.
6. Pull off the air hose from aspirator pipe (D).
7. Undo three Philips head screws securing aspirator (E). Screws are captive and do not come off the aspirator.
8. Turn aspirator anti-clockwise (F) using the exhaust port as the pivot point.
9. Push aspirator upward (G) and remove.

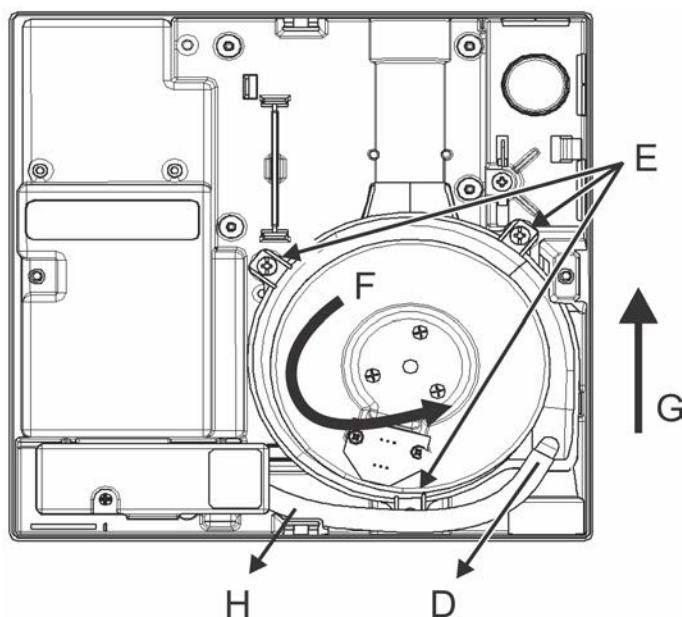

Legend	
D	Aspirator Pipe
E	Screws
F	Aspirator
G	Push Aspirator upward
H	Air Hose

Figure 10-5: Remove Aspirator

Assembly

1. Check the new aspirator has a gasket on the inlet flange and three attached screws.
2. If dirty, wipe the manifold outlet flange surface located beneath the center of the aspirator when it is fitted.
3. Do the reverse of disassembly.
4. Secure aspirator with three screws.
5. Connect removed air hose to pipe on aspirator. Ensure a tight fit over the pipe.
6. Insert Termination Card (B) into interface card (C).
7. Secure the termination card with four screws.
8. Connect aspirator cable connector to socket on aspirator. Connector is polarized and only be inserted one way.
9. Check all wires are secured to their connectors or terminals.
10. Power ON the detector and check the aspirator is running.
11. Close the detector.