

## FEATURES

- ✓ Provides immediate status reporting for a single VESDA zone
- ✓ Allows Zone Control of assigned VESDA detector
- ✓ High intensity alarm LEDs
- ✓ Remote relay operation
- ✓ 20 segment vertical bar graph display
- ✓ Alarm threshold indicators
- ✓ In-built sounder for audible warning
- ✓ Comprehensive fault reporting
- ✓ Multi-mode numeric display (defaults to smoke obscuration)
- ✓ Recessed mounting option
- ✓ Optional 19 inch rack mount versions available



## PRODUCT DESCRIPTION

Display modules provide real-time indication of the status of a VESDA detector. They have a 20 segment vertical bar graph display, a 2 digit numeric display, an audible sounder, clear alarm and fault indicators. They also have 4 push button keys to control the detector and the mode of the display.

The Display Module can be mounted into a detector unit, a remote mounting box or a 19in sub rack. Several displays can be configured to display information from a single detector in multiple locations.

There are various versions of the display module depending on the type of detector and the relay configuration required. The LaserSCANNER display has a fourth mode for the numerical display which shows the First Alarm Sector (FAS), this being the number of the sector (pipe) that has detected smoke. For the LaserCOMPACT the Fire 2 LED is omitted.

### Smoke Indication

Smoke levels are continuously shown on a bar graph display where each illuminated segment indicates the current level of detected smoke.

The top segment of the bar graph indicates the Fire 1 smoke threshold level and each segment below that level represents 1/20 of the Fire 1 smoke threshold level.

To the left of the bar graph are the Fire 1, Action and Alert smoke threshold indicators. At a glance, these provide a visual representation of the programmable alarm thresholds showing how close the smoke level is to triggering the next level of alarm.

### Status Lights

High intensity flashing LEDs provide a clear indication of the fire condition and are accompanied by an audible warning appropriate to the alarm condition. Similarly, any fault condition is indicated by a series of LEDs and an audible tone providing a comprehensive range of status information. The audible warning is easily silenced by pressing the Silence button at which point any flashing LEDs are illuminated until the cause of the event is identified, rectified and the system reset.

### Numeric Display

A 2 digit numerical readout has a number of modes that are indicated by up to four LEDs:

- ✓ The current smoke level in % obscuration/m
- ✓ Fire 1 threshold in % obscuration/m. This is the sensitivity of the detector.
- ✓ The VESDA zone number
- ✓ First Alarm Sector on the LaserSCANNER display – the numeric readout shows the sector (pipe) number that has detected smoke.

### Push Button Keys

Four large tactile push button keys enable users to reset, isolate or silence the detector and control the mode of the display module. The buttons can be disabled to prevent operation of it's functions.


A lamp test routine is initiated by pressing the Mode key for two seconds. A Manual Scan can be initiated on the LaserSCANNER by holding the Silence button for 2 seconds.

### TECHNICAL SPECIFICATIONS


Supply voltage	18 to 30Vdc
Power consumption @ 24 VDC	<p><b><u>Module Only - Quiescent</u></b> Power - 1.6W Current - 60mA</p> <p><b><u>Module Only - With Alarm</u></b> Power - 2.2W Current - 80mA</p> <p><b><u>In Remote Mounting Box (no relays) - Quiescent</u></b> Power - 2.4W Current - 90mA</p> <p><b><u>In Remote Mounting Box (no relays) - With Alarm</u></b> Power - 3.0W Current - 110mA</p>
Dimensions (W x H x D)	Mounted in Remote Box - 140mm x 150mm x 85mm
Operating temperature	0°C to 39°C
Humidity	10-99% non-condensing
Alarm indicators	High intensity LEDs with 70 degree viewing angle
Push button keys	<p><b>(Mode/Test, Silence/Scan, Reset, Isolate)</b> Can be disabled during commissioning (except Silence). A pressed key gives a short tone when enabled and a tone when disabled.</p> <ul style="list-style-type: none"> <li>• <b>Mode/Test (Dual Function)</b> <i>Short Press:</i> Selects modes on the numeric display: Sensitivity, Smoke Level, and Zone Number. For LaserSCANNER displays, the first sector/pipe in alarm can be selected. Note: The current mode is indicated by the appropriate LEDs. <i>Long Press:</i> Activates the Test Mode</li> </ul>

	<ul style="list-style-type: none"> <li>• <b>Silence/Scan (Dual function on Scanner only)</b>  <i>Short Press:</i> Silences any alarm or fault warnings. Flasing LEDs are permanently lit until the event is cleared and the system reset. Only affects the local display.  <i>Long Press:</i> Initiates the scanning of each pipe individually for smoke and displays the current levels.</li> <li>• <b>Reset</b>  Resets all the alarms and faults on the detector and its associated displays. If the alarm or fault condition has not been cleared then the appropriate fault indications will be repeated. Reset does not clear the isolate mode.</li> <li>• <b>Isolate</b>  Isolates the detector from any external devices or systems. This includes all relays in the detector and in remote units. Isolate relay is activated while the detector is in isolate mode.</li> </ul>
<b>Fault indicators</b>	<p><b>System</b> – A fault that affects the whole VESDA system (any devices connected on VESDAnet).</p> <p><b>Zone</b> – A fault that affects only the assigned VESDA detector and its associated displays.</p> <p><b>Urgent</b> – A serious fault that requires immediate attention. This light will only illuminate when at least one other fault light is lit.</p> <p><b>Power</b> – A fault with either the mains AC or battery backup power supply.</p> <p><b>Network</b> – A failure in the VESDAnet communications link.</p> <p><b>Airflow</b> – Airflow drift. <b>Urgent</b> indicates serious aspirator or pipe failure.</p> <p><b>Filter</b> – Filter needs replacing. <b>Urgent</b> indicates that filter replacement is overdue.</p>


**Display Module**  
(side view)

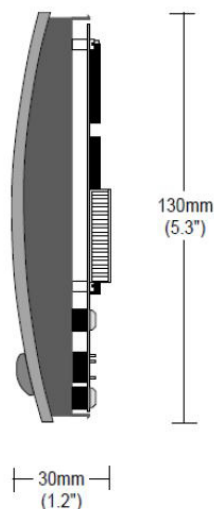


**Display Module**  
(front view)

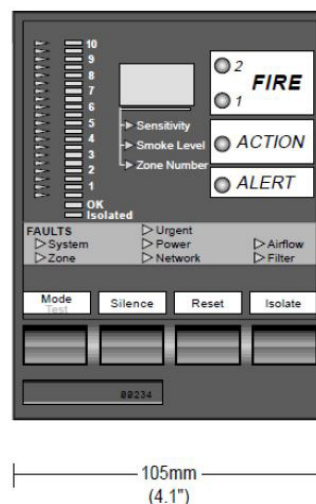

#### Remote Mounting Box

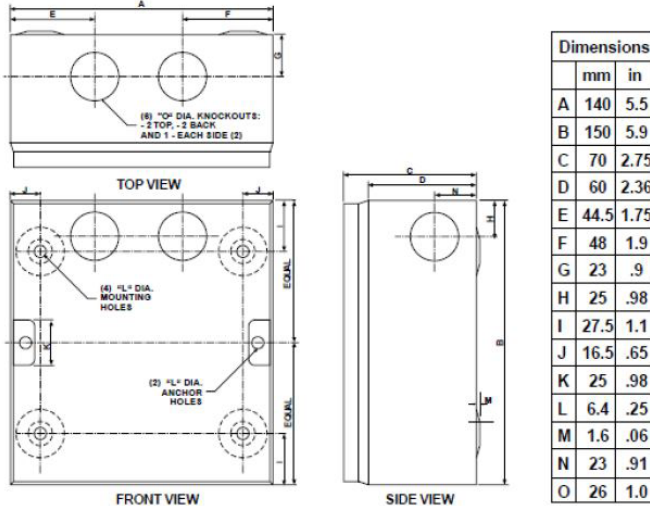

#### 19" Sub Rack

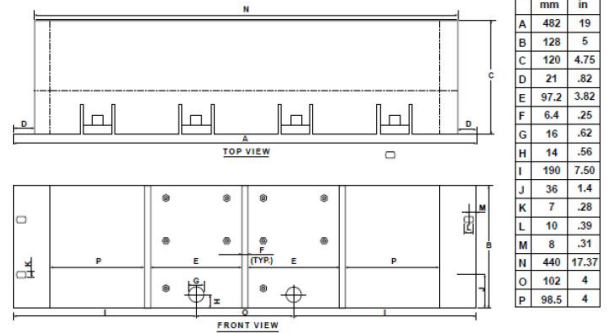

## ORDERING INFORMATION

Display, In Remote Mounting Box with termination card:

<b>VRT-100</b>	Remote Box fitted w/ Programmer
<b>VRT-200</b>	Remote Box fitted w/ VLP Display & 7 Relays
<b>VRT-300</b>	Remote Box fitted w/ VESDAnet socket
<b>VRT-400</b>	Remote Box fitted w/ Scanner Display & 7 Relays
<b>VRT-500</b>	Remote Box fitted w/ blank plate DRP & 7 Relays
<b>VRT-600</b>	Remote Box fitted w/ Display, no Relays
<b>VRT-700</b>	Remote Box fitted w/ Scanner Display, no Relays
<b>VRT-800</b>	Remote Box fitted w/ Scanner Display & 12 Relays
<b>VRT-J00</b>	Remote Box fitted w/ Compact Display & 7 Relay RTC
<b>VRT-V00</b>	Remote Box fitted w/ Focus Display & 7 Relays
<b>VRT-S07</b>	System Relay Module

Also available to be configured in 19in. Sub Racks – contact FireSense for more information.

## APPROVALS

- ✓ FM Approved
- ✓ UL Approved
- ✓ ActivFire Listed